


## Position of Parts in Instrument Panel

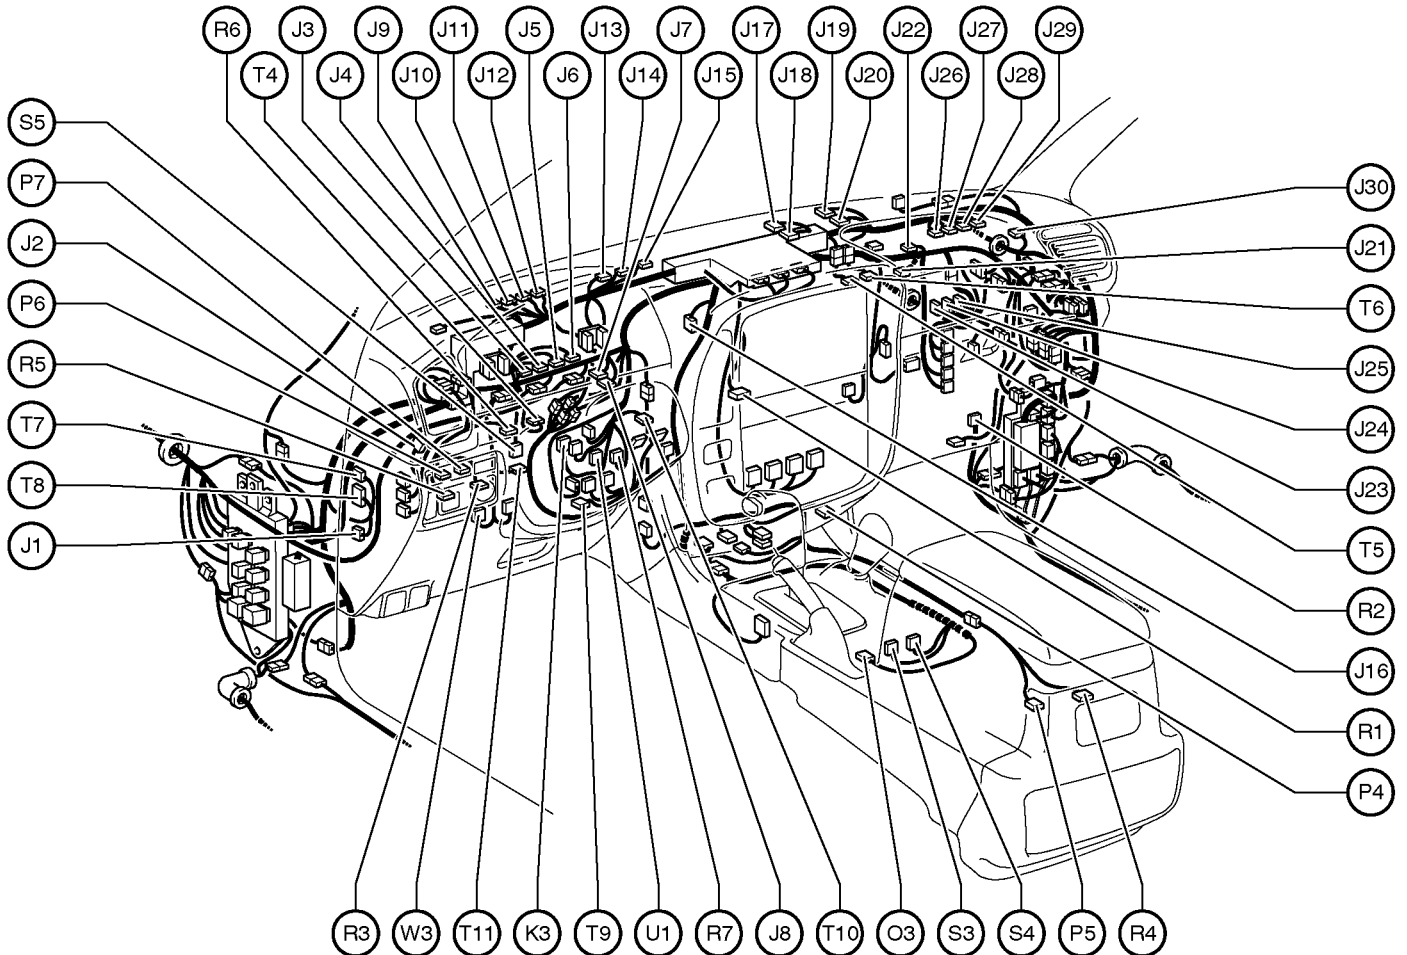

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 22 Junction Connector
- J 23 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 27 Junction Connector
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Junction Connector
- K 3 Key Interlock Solenoid

O 3 O/D Main SW and Shift Lock Control ECU

- P 4 Power Outlet (Front)
- P 5 Power Outlet (Rear Console Box)
- P 6 Power Quarter Window SW LH
- P 7 Power Quarter Window SW RH

- R 1 Radio and Player
- R 2 Rear Diff. Lock Control ECU
- R 3 Rear Diff. Lock SW
- R 4 Rear Heater SW
- R 5 Remote Control Mirror SW
- R 6 Rheostat
- R 7 Room Temp. Sensor (Front)

- S 3 Seat Heater SW (Driver's Seat)
- S 4 Seat Heater SW (Front Passenger's Seat)
- S 5 Stop Light SW

- T 4 Telescopic Motor
- T 5 Theft Deterrent ECU
- T 6 Theft Deterrent ECU
- T 7 Tilt and Telescopic ECU
- T 8 Tilt and Telescopic ECU
- T 9 Tilt Motor
- T 10 Transponder Key Amplifier
- T 11 Turn Signal Flasher

U 1 Unlock Warning SW

W 3 Wireless Door Lock ECU