




# Theft Deterrent

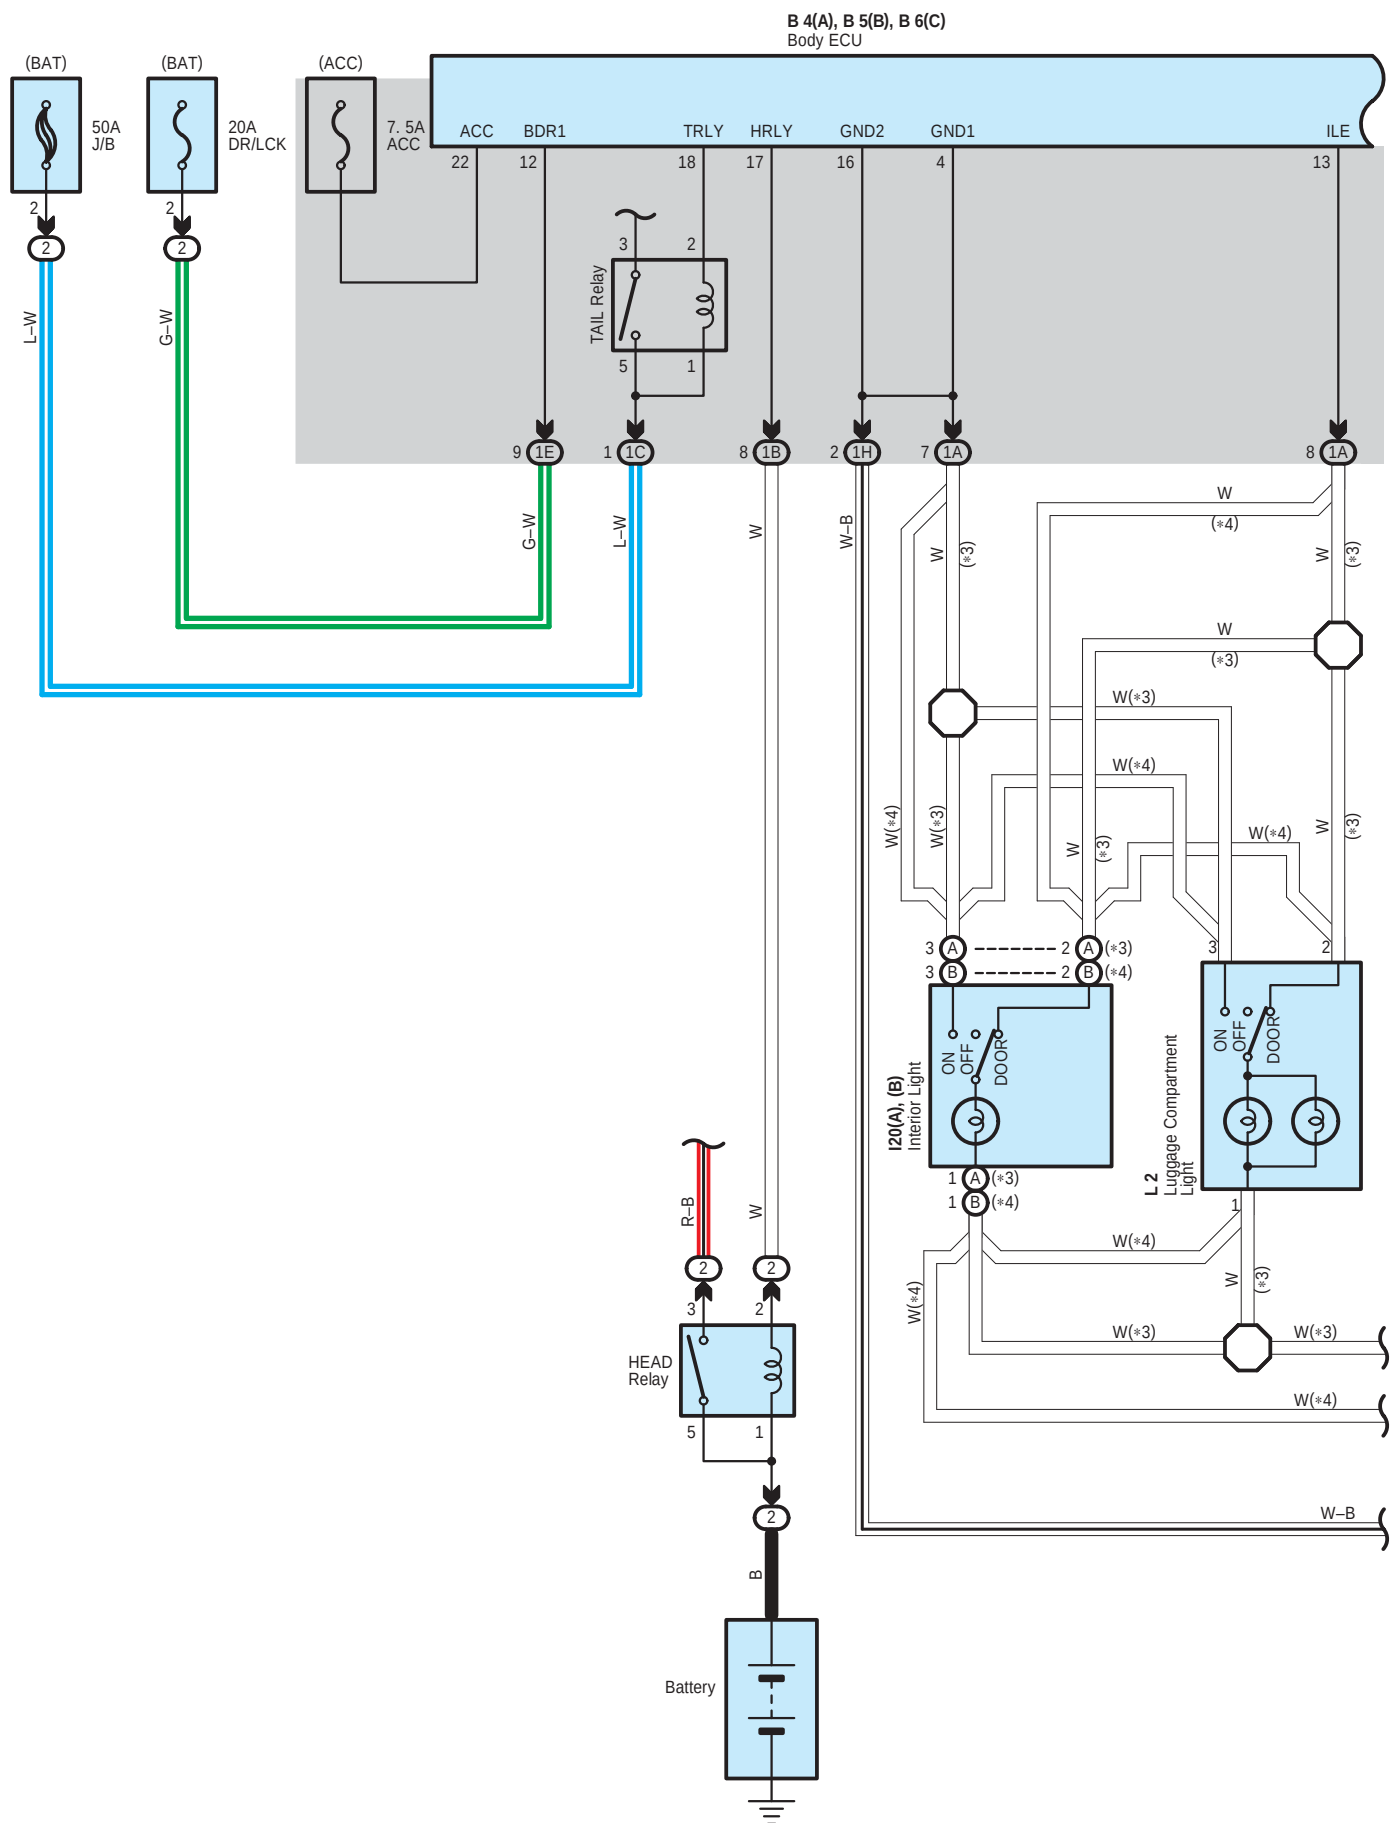

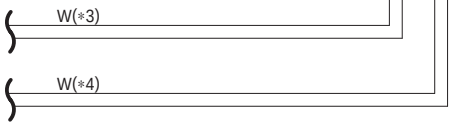


# Theft Deterrent

B 4(A), B 5(B), B 6(C)  
Body ECU

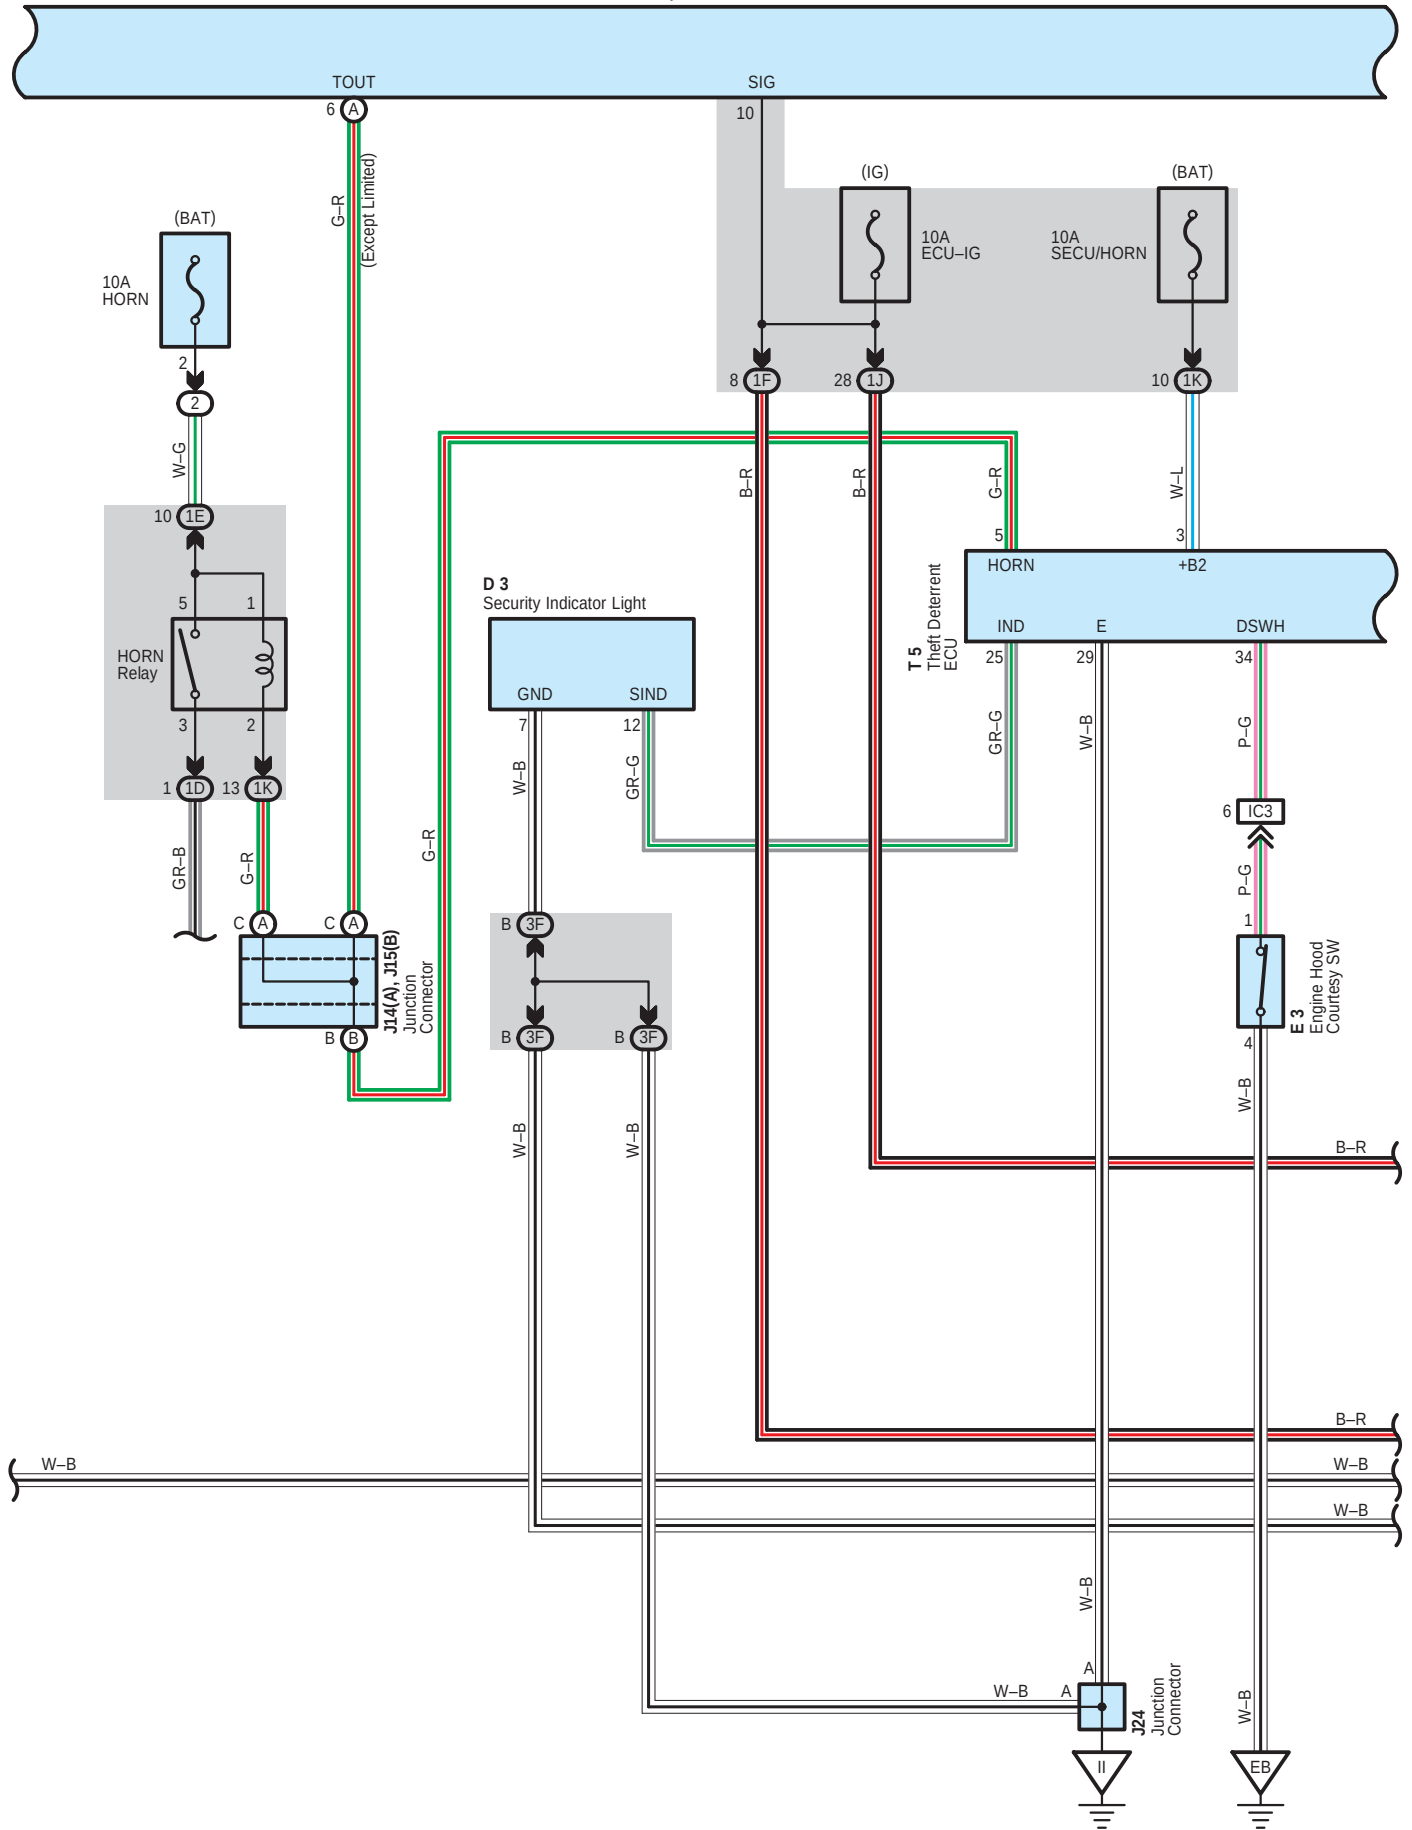


B 4(A), B 5(B), B 6(C)  
Body ECU

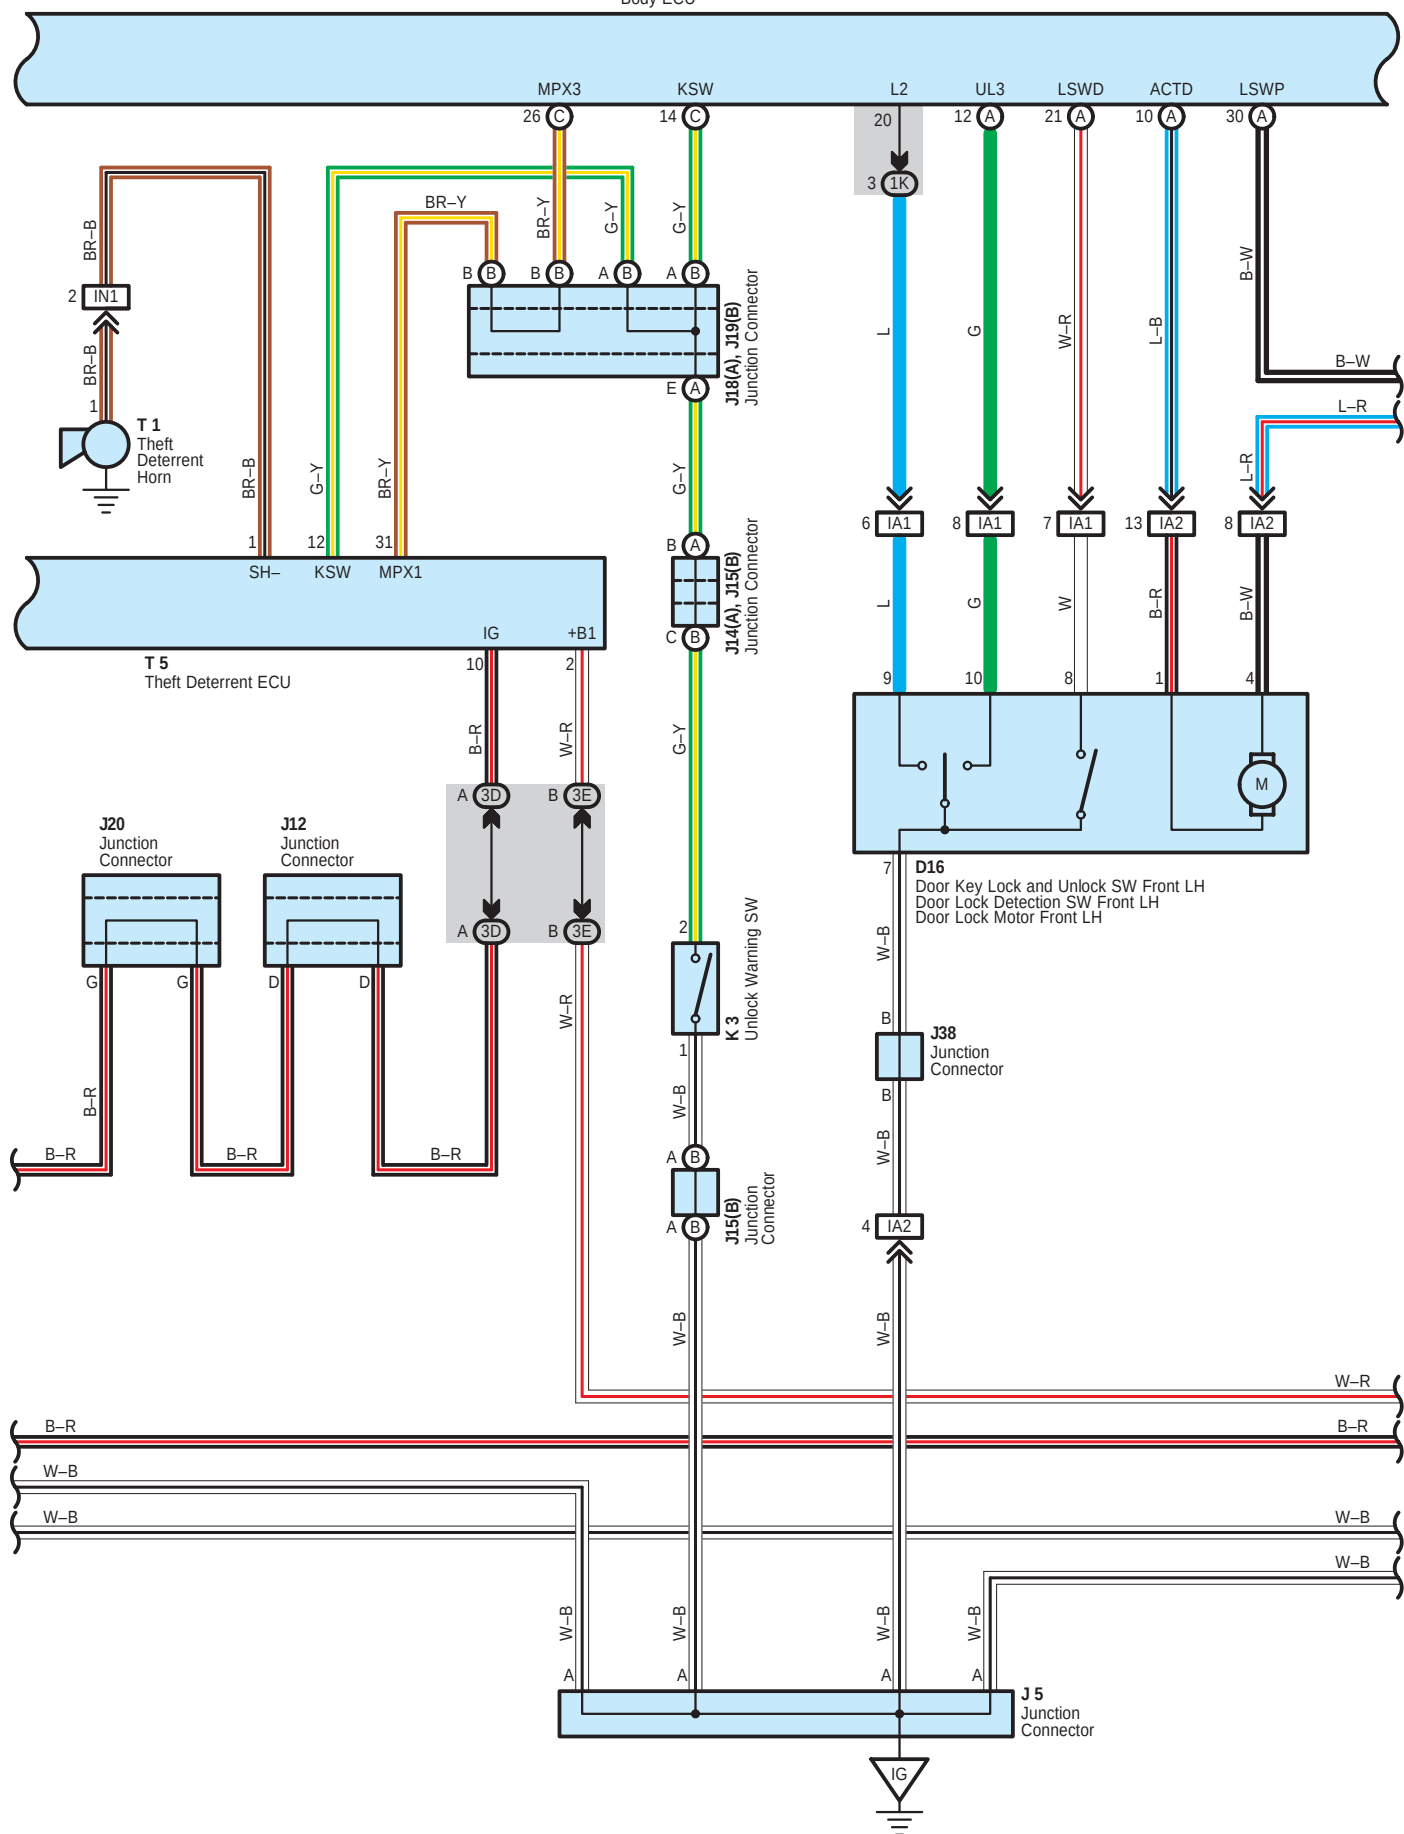

# Theft Deterrent

B 4(A), B 5(B), B 6(C)  
Body ECU

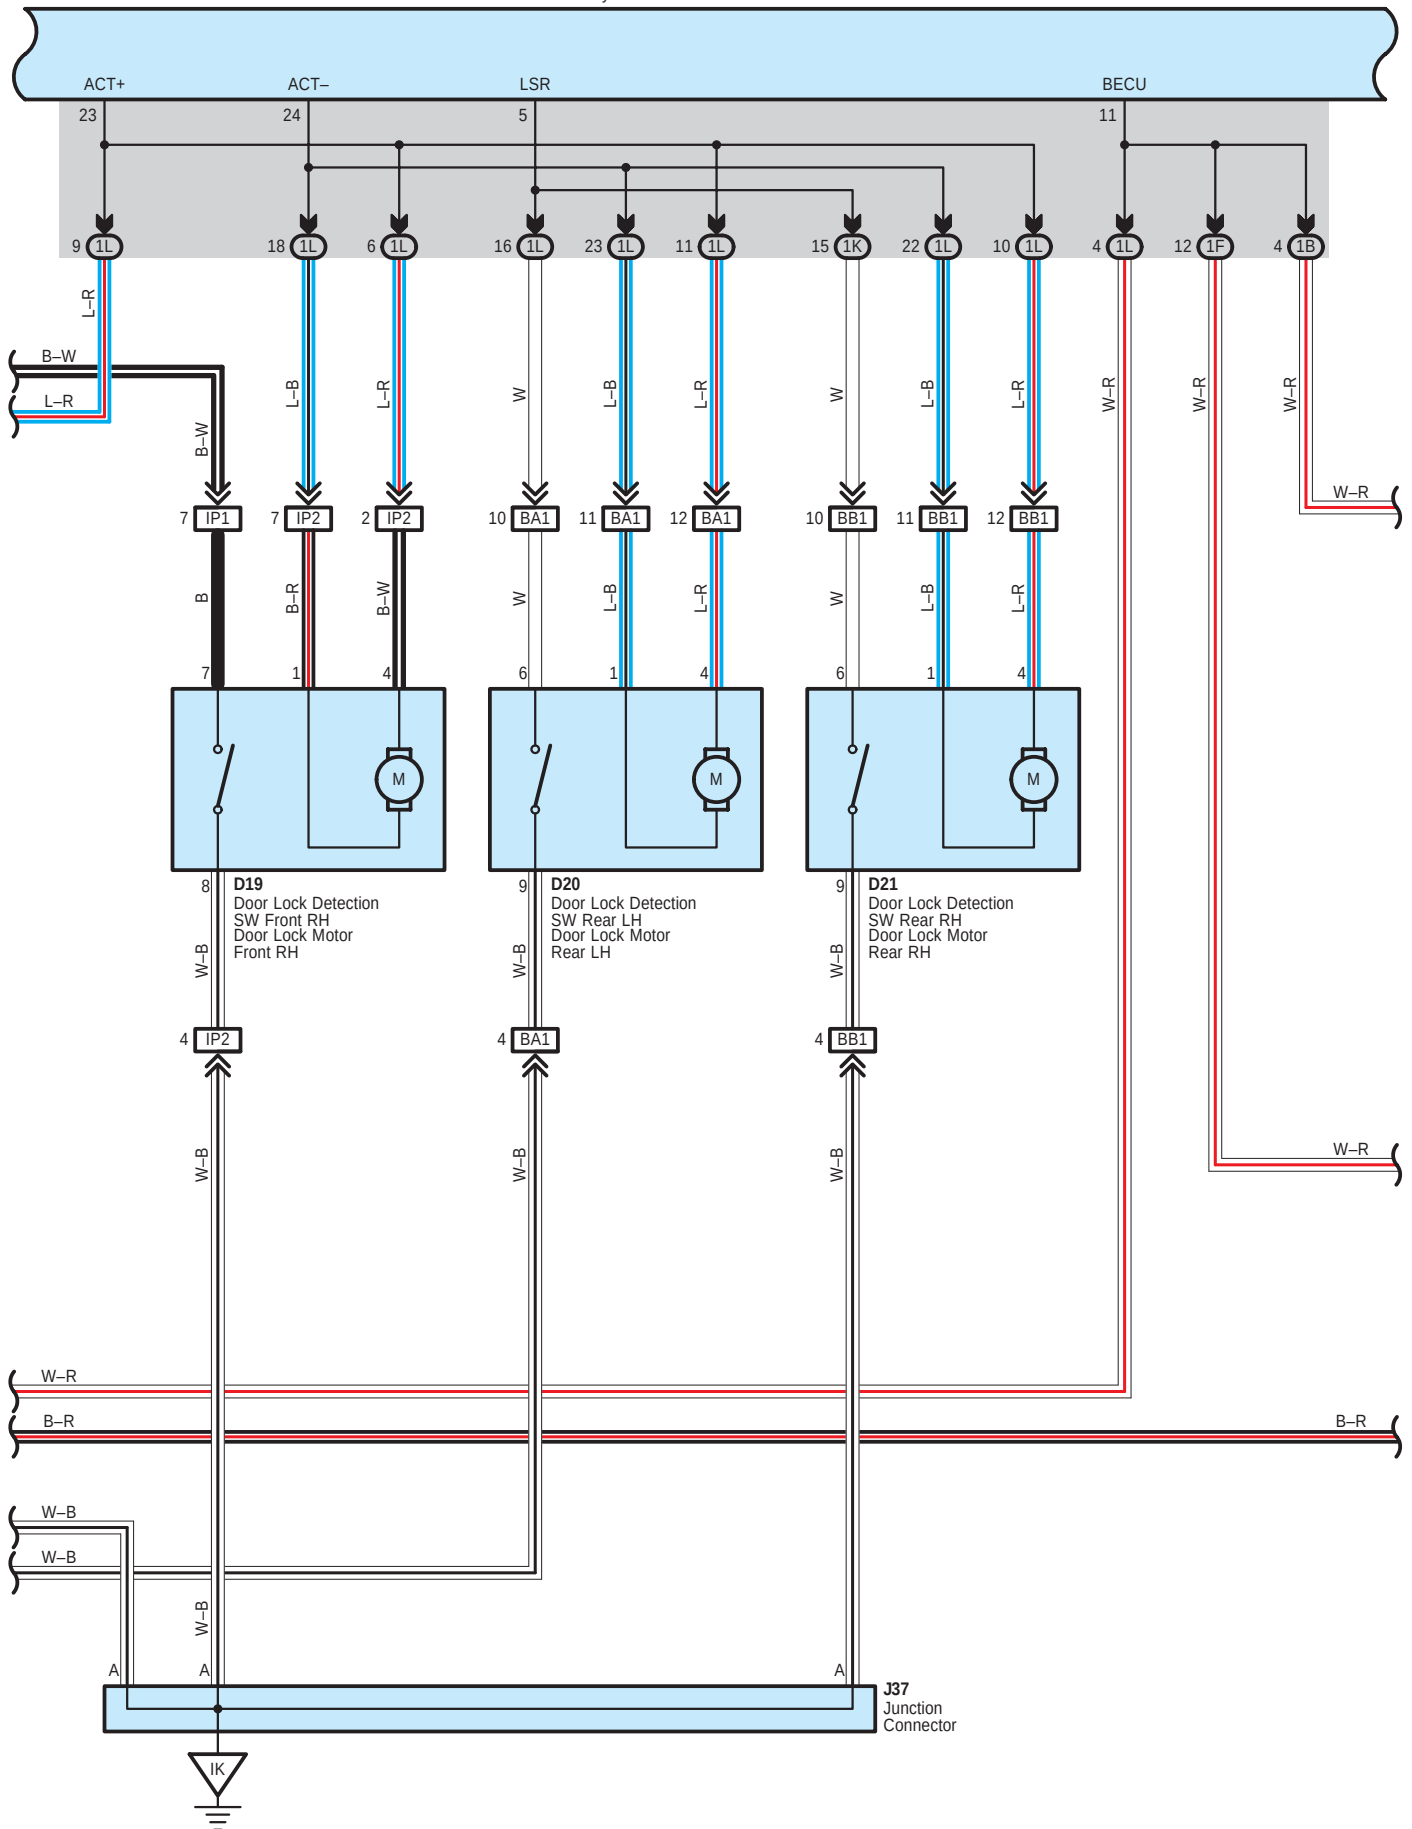



# Theft Deterrent

## : Parts Location

| Code |   | See Page | Code |    | See Page    | Code |   | See Page    |
|------|---|----------|------|----|-------------|------|---|-------------|
| B4   | A | 36       | D19  | 40 |             | J19  | B | 38          |
| B5   | B | 36       | D20  | 40 |             | J20  |   | 38          |
| B6   | C | 36       | D21  | 40 |             | J24  |   | 38          |
| B7   |   | 40       | E3   |    | 32 (2UZ-FE) | J37  |   | 38          |
| B8   | A | 40       |      |    | 34 (1GR-FE) | J38  |   | 40          |
| B9   | B | 40       | I20  | A  | 40          | J39  |   | 40          |
| C8   | A | 37       |      | B  | 40          | J40  | A | 40          |
| C10  | C | 37       | J5   |    | 38          | J41  | B | 40          |
| D2   |   | 37       | J7   |    | 38          | K3   |   | 39          |
| D3   |   | 37       | J8   | A  | 38          | L2   |   | 40          |
| D12  |   | 40       | J9   | B  | 38          | T1   |   | 33 (2UZ-FE) |
| D13  |   | 40       | J12  |    | 38          |      |   | 35 (1GR-FE) |
| D14  |   | 40       | J14  | A  | 38          | T5   |   | 39          |
| D15  |   | 40       | J15  | B  | 38          | T9   |   | 39          |
| D16  |   | 40       | J18  | A  | 38          |      |   |             |

## : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 2    | 22       | Engine Room R/B (Engine Compartment Left) |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)             |
|------|----------|------------------------------------------------------------------|
| 1A   | 24       | Roof Wire and Driver Side J/B (Lower Finish Panel)               |
| 1B   | 24       | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)   |
| 1C   |          |                                                                  |
| 1D   |          |                                                                  |
| 1E   |          |                                                                  |
| 1F   | 24       | Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)         |
| 1H   | 25       | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)   |
| 1J   |          |                                                                  |
| 1K   |          |                                                                  |
| 1L   |          |                                                                  |
| 3D   | 28       | Instrument Panel Wire and Center J/B (Instrument Panel Brace RH) |
| 3E   |          |                                                                  |
| 3F   |          |                                                                  |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)             |
|------|----------|------------------------------------------------------------------------|
| IA1  | 46       | Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)         |
| IA2  |          |                                                                        |
| IC3  | 46       | Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)      |
| IC4  |          |                                                                        |
| IE1  | 46       | Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)            |
| IF1  | 46       | Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B) |
| IN1  | 47       | Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)     |
| IO3  | 47       | Instrument Panel Wire and Floor Wire (Right Kick Panel)                |
| IP1  | 47       | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)        |
| IP2  |          |                                                                        |
| BA1  | 48       | Rear Door No.2 Wire and Instrument Panel Wire (Left Center Pillar)     |
| BB1  | 48       | Rear Door No.1 Wire and Instrument Panel Wire (Right Center Pillar)    |
| BD1  | 48       | Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)       |



: Ground Points

| Code | See Page    | Ground Points Location    |
|------|-------------|---------------------------|
| EB   | 44 (2UZ-FE) | Front Left Fender         |
|      | 45 (1GR-FE) |                           |
| IG   | 46          | Left Kick Panel           |
| II   | 46          | Instrument Panel Brace RH |
| IK   | 46          | Right Kick Panel          |
| BL   | 48          | Floor Seat Crossmember LH |
| BO   | 48          | Rear Pillar LH            |