



Garmin InReach SE+ Quick User Manual



Garmin InReach SE+ Quick User Manual

Overview

First things first,

Thank you for volunteering to be a trail leader during the Cruise Moab Off-Road event in Moab Utah. As a trail leader you play an integral part during Cruise Moab by helping to provide a thrilling and safe off-roading experience for the individuals who will be participating in the trail runs. One of the main goals for the Cruise Moab committee is to ensure that all of the individuals who are participating in trail runs feel that their trail leaders have a strong sense of leadership, off-road knowledge and can take control of a potentially significant situation if one arises.

As the trail leader, one of the tools that will be provided to you is a Garmin InReach SE+ GPS/Satellite communication device. This compact device uses satellite technology to let you send and receive text messages and emails from anywhere on the planet. The internal GPS sends location data with each message that is sent. While the InReach device is in "Tracking" mode it will send tracking points every 10 minutes allowing the Cruise Moab committee to follow and track your progress while you are on the trail. In the event of an emergency situation there is a dedicated SOS button that lets you call for help, no matter where you are. SOS messages are received by GEOS, a worldwide emergency response coordination center with 24/7/365 staffing.

One caveat with the Garmin InReach SE+ GPS/Satellite device is that it is strictly a **communication device only** and should not be used like a traditional GPS guidance unit or as a tool to navigate the trail you are leading. While the device will send your tracking points by way of GPS to the Cruise Moab committee so that your progress can be viewed on a computer in real time, the device has no preloaded maps or the ability to guide turn by turn. Please have firsthand knowledge of the trail you are leading in addition to using traditional paper maps or other types of directional GPS devices for navigating.

Again thank you for volunteering to be a trail leader during Cruise Moab. Your assistance is greatly appreciated and we hope that the Garmin InReach SE+ GPS/Satellite communication device will help enhance your trail leading experience.

Cruise Moab Committee.

Garmin InReach SE+ Quick User Manual

Table of Contents

Device Overview.....	1
Powering on Unit.....	2
Start Tracking.....	3-4
Sending a Quick Message.....	5
Sending a Custom Message.....	6-7
Reading a Received Message.....	8
“SOS” Emergency Button.....	9

Garmin InReach SE+ Quick User Manual

Device Overview



①	Internal Iridium® antenna
②	SOS key (under protective cap)
③	Status LED
④	Keys
⑤	Power key
⑥	Mounting spine
⑦	Micro-USB port (under weather cap)


Garmin InReach SE+ Quick User Manual

Turning On the Device

Hold .



1. Press and hold the power button on top of the Garmin InReach unit to power on

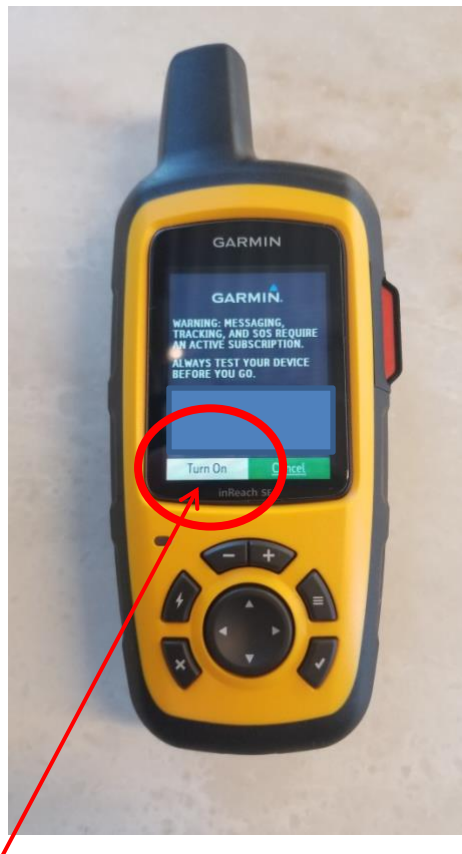

2. Move the cursor to "Turn On" and press the select button (Check Mark)

Garmin InReach SE+ Quick User Manual

Start Tracking

When you are issued an InReach device, the device will be set up to automatically start tracking your movement as soon as the device is powered on. When the device is powered on the screen will go blank after about 10 seconds to conserve battery power. As long as the device is powered on it will continue to track your movement and send tracking updates even when the screen is blank.



1. To verify that your InReach unit is tracking your progress, the “Tracking” icon on the main screen should have a small green check mark next to it indicating that the unit is in “Tracking” mode.

Garmin InReach SE+ Quick User Manual

Start Tracking



1. If the green check mark is not present on the "Tracking" Icon the InReach device is not in "Tracking" mode.
2. To activate "Tracking" mode move the cursor to the tracking icon and press the select key (Check Mark). Highlight the "Start" icon in the bottom right hand corner of the InReach screen and press the select button (Check Mark) to begin tracking.

Garmin InReach SE+ Quick User Manual

Sending Quick Message

Sending a “Preset” message allows you to quickly send a short message without having to manually type it on the keyboard screen. There are three “Preset” messages to choose from and all three messages will automatically be sent to the Cruise Moab InReach administrator.




1. To send a quick message move the cursor to the top left corner of the InReach screen and highlight the “Preset” icon and press the select button (Check Mark).
2. Choose one of the three “Preset” messages options and then press the select button (Check Mark).

Garmin InReach SE+ Quick User Manual


Sending a Custom Message

In the event you have to send a more detailed message to update your status on the trail or if you require additional support you can send a custom message to the InReach administrator.


To send a custom message follow the screen shot directions below:

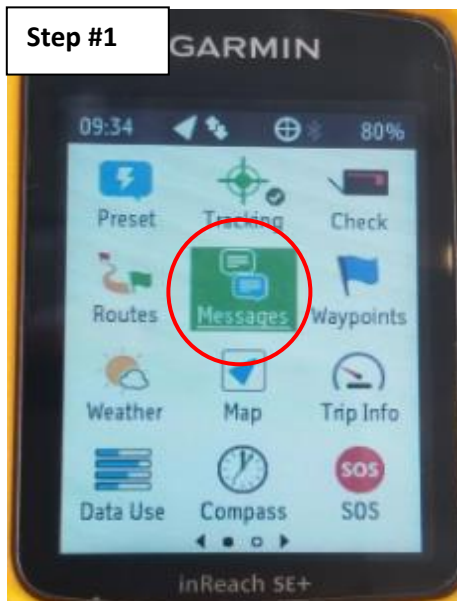


1. Select the “messages” icon in the center

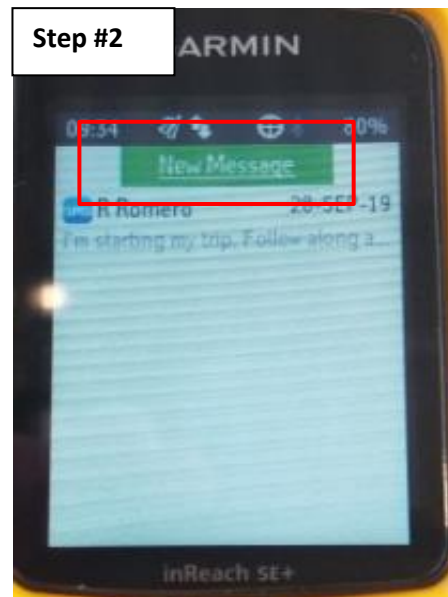

2. Select “New Message” at the top.

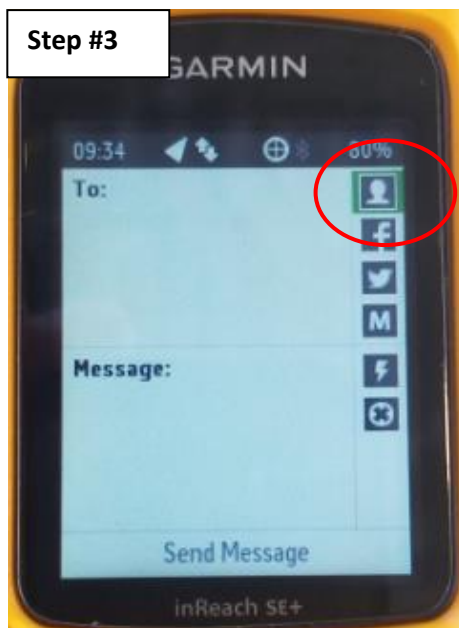

3. Select the head icon top right of screen

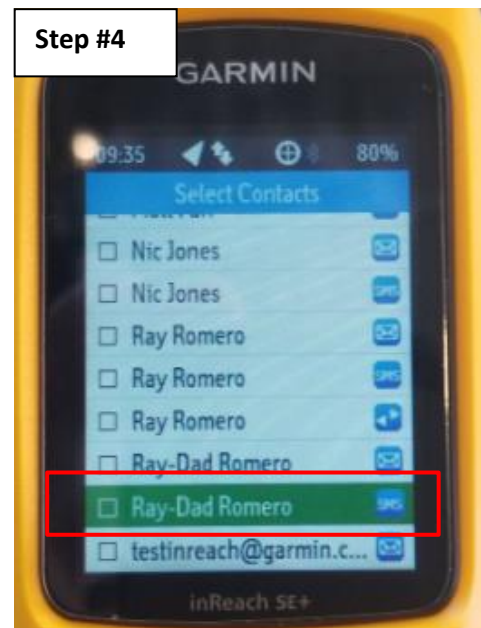

4. Select the contact with the “SMS” icon

Garmin InReach SE+ Quick User Manual

Sending a Custom Message




5. Highlight the “Type Text” Box and select



6. Type your message and select “Done”



7. Highlight the “Send Message” icon and select

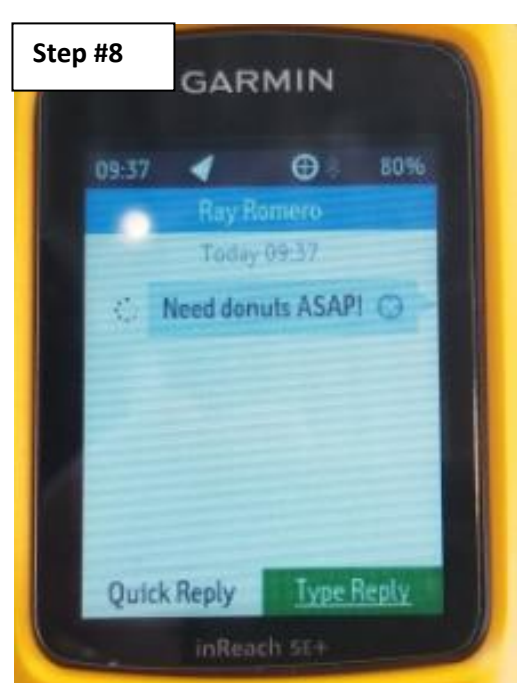

8. Verify your message has been sent

Garmin InReach SE+ Quick User Manual

Reading a Received Message



1. To read a received message that has been sent to your InReach device highlight the “Messages” icon in the center of the main screen and press the select button (Check Mark).
2. Your new received message should appear at the top of the screen like a normal text message.
3. Press the select button (Check Mark) to read your new received message.

NOTE: Your InReach unit is set up to continuously ring when a new message has been received and will not stop ringing until the message has been read.

Garmin InReach SE+ Quick User Manual

“SOS” Emergency Button

Your Garmin InReach device is equipped with an “SOS” button so that in the event of a life threatening situation or major medical issue, your group can be easily located and the proper emergency responders can be notified to act accordingly.



1. To activate the “SOS” system on your InReach device, locate the hard plastic cover on the right side and pull the cover back.
2. Press and hold the “SOS” key and wait for the countdown. The InReach device will send a default message with your location information.
3. You will receive a message from the emergency response service that you will need to reply to.
4. Follow emergency response messages promptly.

Disclaimer: Please use the “SOS” button for serious medical or life threatening emergencies only! Any and all individuals who require the assistance of the “SOS” emergency system will be responsible for all rescue and medical costs incurred.

Garmin InReach SE+ Quick User Manual

End of Document

