



IU3 Output

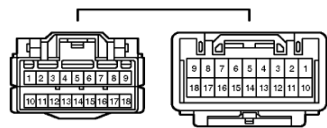

Pin 6

1991 Land Cruiser

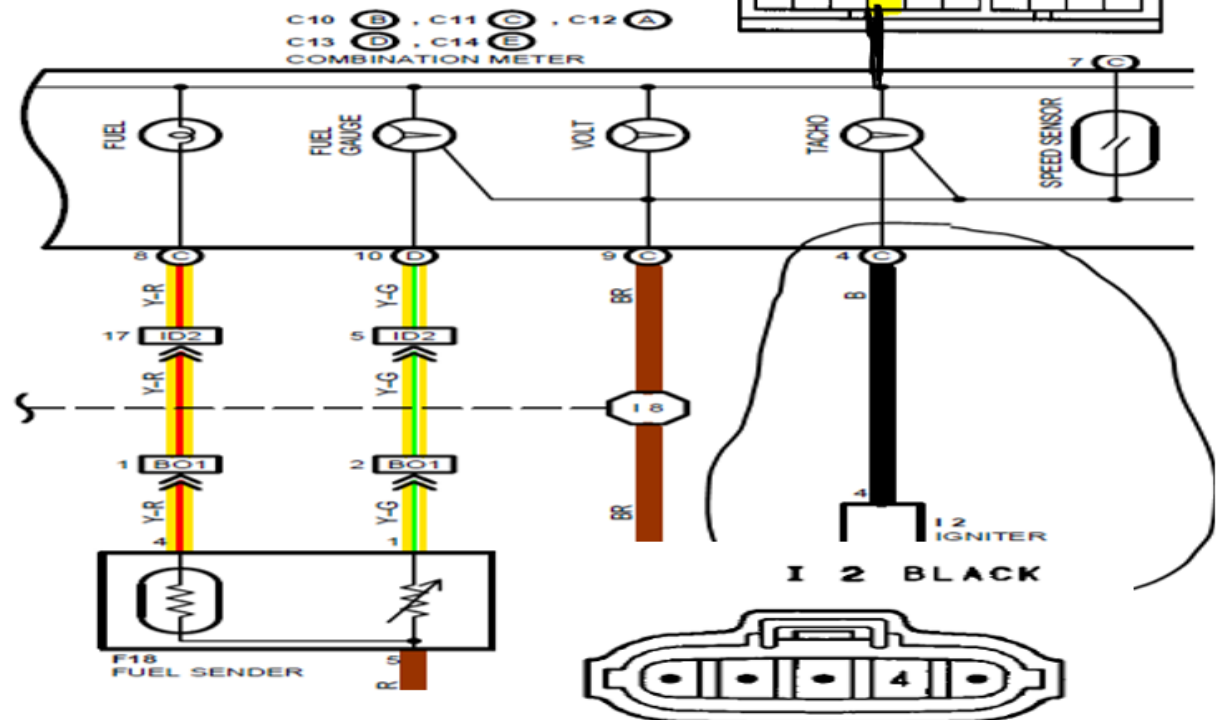

- 1) Remove Gauge Cluster and look for connector **C11**. Cut the "Black" wire in **port 4** and connect it to the SGI-100bt terminal "HVLTL" (not enough power using standard)
- 2) The 'Tach' wire from the ECU will go to the 'Input' position on the Dakota Digital. This is the other end of the solid black wire.. Simple